

## User manual


### Product information

- Power consumption: 10W (5W x2)
- Power supply: AC 100 – 240V/50/60Hz, DC12V/1.5A
- Power output: 1KHz, 4 ISohm
- Input port: 3.5 stereo
- Control: Volume controller
- Minimum Volume Noise: Less than 1.0mV
- Maximum Volume Noise: Less than 5.0mV
- Digital/ waterproof speakers
- Amplifier built-in
- Stainless steel finish
- Wallmounted dock station is compatible to any portable MP3 player, smartphone (installation outside the shower enclosure recommended)


### Attention

- Install the product in accordance with the explanation for installation after being well informed of them.
- Do not install the product with wet hands.
- Install the VOL & AUX in a position where water does not come in contact.
- Make sure all electrical connections are well made.
- Be sure to use neutral detergents and soft cloth. Otherwise surface may be damaged
- Do not disassemble or modify the product randomly. It may cause electric shocks.
- When it lightens and thunders, turn off the product to avoid damage.
- Do not place heavy object on the dock station when cover is open
- Use the product after inserting the AUX cable properly. (Otherwise, noises may occur or you can hear sounds partially).
- Keep Aquamusik away from places where there are severe shakes or magnets.
- It is recommended not to put the volume at full capacity. 75% of the full capacity is recommendation.

### Components


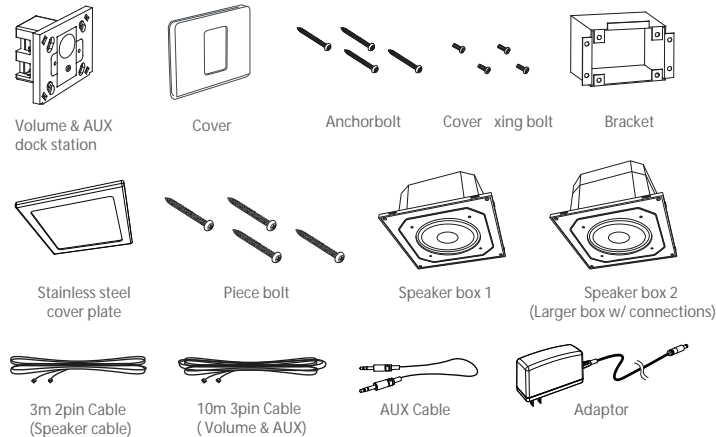


### Dimensions

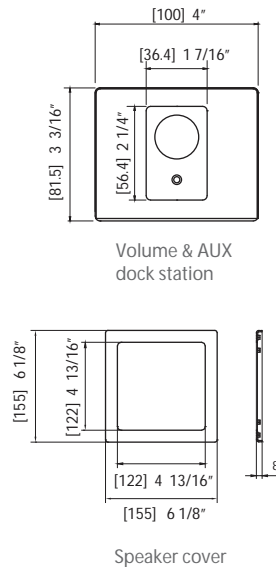


### Installation


#### VOLUME CONTROL / AUX WALLMOUNT DOCK STATION

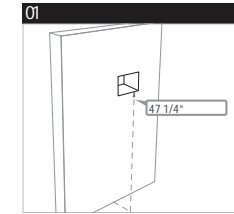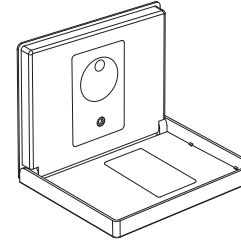


Make a 75x65mm (3" x 2-9/16") hole in the place where the dock station will be installed. The dock station has to be installed outside the shower

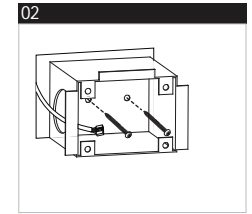


Pass the cable through the bracket hole and then fix the bracket.

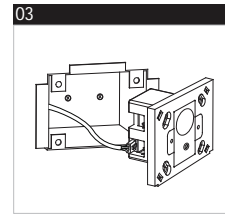


Connect the cable to the Volume & AUX dock station

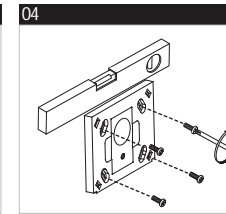

Make sure the dock is level. Fix it with screw supplied


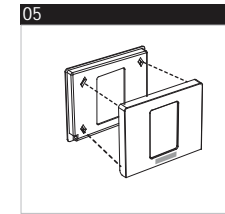


Push the cover until it snaps in place. Make sure the cover open down (as shown)

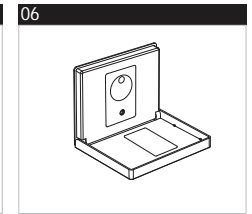


Installation completed


#### SPEAKER

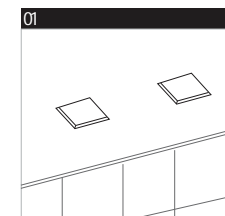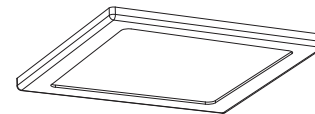


Cut two holes of 115x115mm (4 1/2" x 4 1/2") on the ceiling

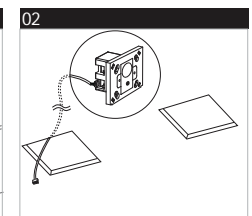


Take out the cable beforehand connected to the VOL&AUX through the hole of the one side.

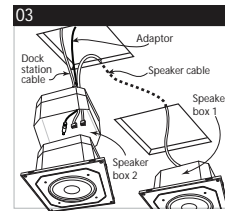


Connect the dock station, speaker cable and adaptor respectively to the connectors in the PCB board found in the compartment of the larger speaker (speaker box 2)

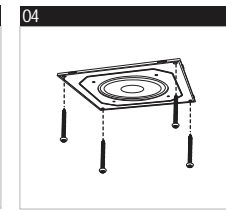

Place the speaker box close to the hole, and fix the speaker box to the ceiling, using the screws provided

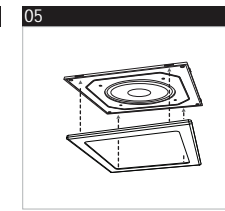

Push the cover plate until it snaps in place

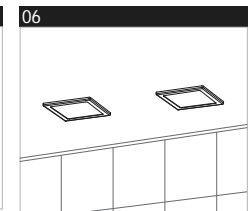

Installation completed

### Warranty

The Aquamusik is warranted one year against manufacturer defect. For any further information on the Aquamusik warranty, contact technical support at [tech@aquabrass.com](mailto:tech@aquabrass.com)

